


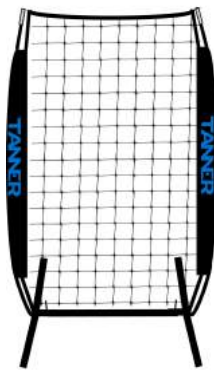


COMPONENTS


- FRAME BOTTOM BAR -----x 1
- FRAME FOOT-----x 2
- FRAME SIDE POLE-----x 4
- NETTING-----x 1
- STAKES-----x 4
- CARRYING BAG-----x 1



I-SCREEN ASSEMBLY INSTRUCTIONS

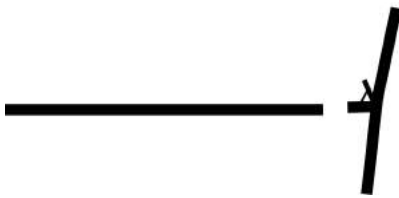


1. Connect the Frame Bottom Bar to one leg. Ensure the pin engages to lock the pieces together.

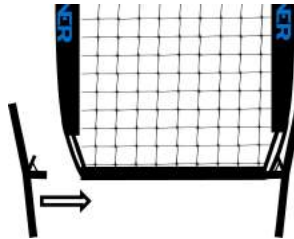


2. Slide the sleeve in the bottom of the netting over the Frame Bottom Bar. Secure the other Frame Foot to the Bottom Bar. Ensure the pin engages.




3. Connect two sets of Frame Side Poles together with the metal rope catch in the top position.

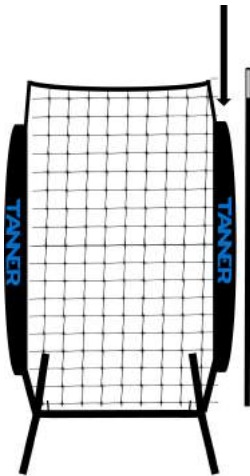

4. Feed one Frame Side Pole (Note: Two pieces are connected to make one pole) through the sleeve and hook the net loop over the metal rope catch on top.

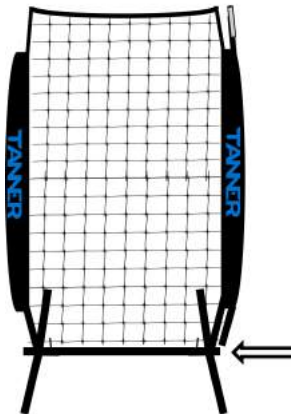

5. Insert the bottom of the Frame Side Pole into the female connector on the Frame Foot. Repeat on the other side.

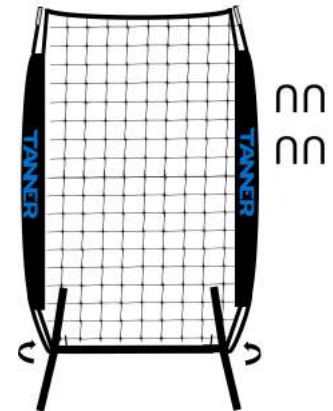

6. Secure the net to the base with the loop on the netting, and use metal stakes as needed to secure the base to the ground.

WWW.TANNERTees.COM
SUPPORT@TANNERTees.COM
800-230-6219