


Bullet Combo Screen



correct wheel alignment

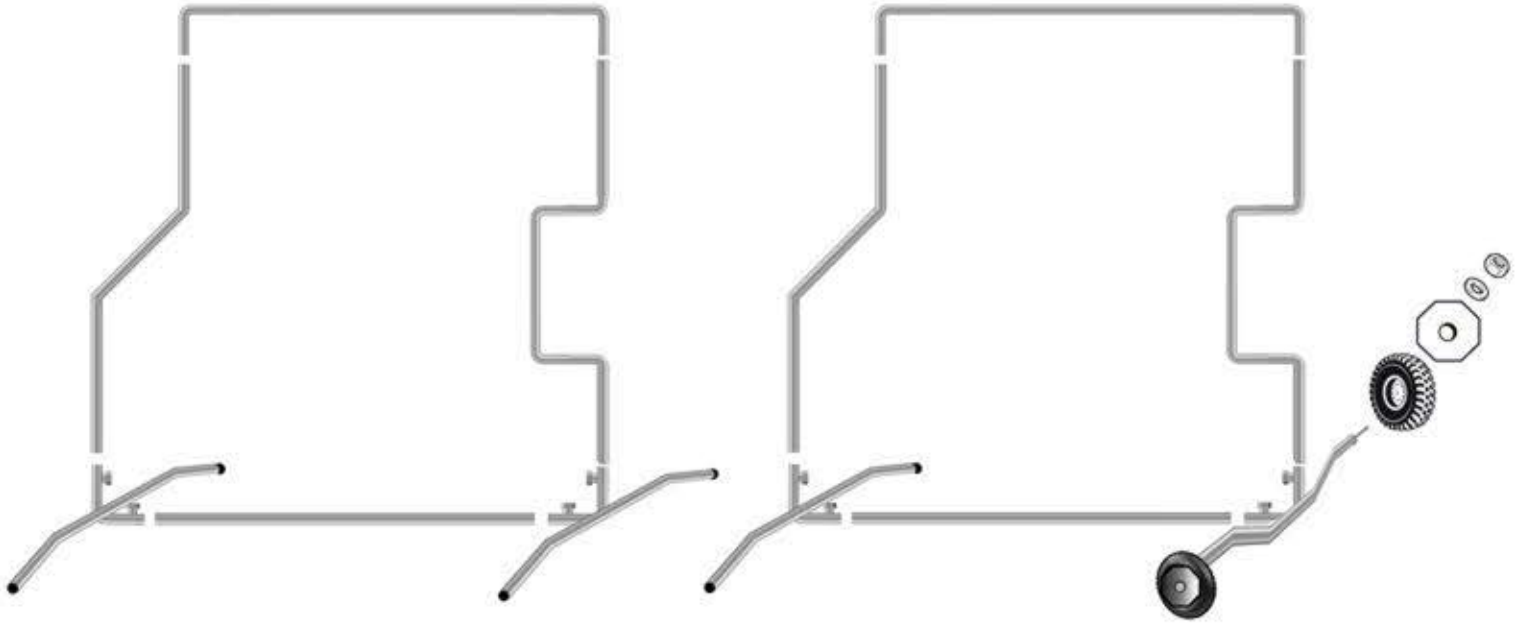

Bullet L-Screen Combo

Instructions

1. Make sure you have all component parts for your order.
 - a. (6) pieces of steel as seen in diagram
 - b. (1) Black Nylon Net
 - c. Bungee Balls
2. Assemble the screen using diagram.
3. At each connection point use one of the bolts to secure the steel. Repeat this step for all connection points as illustrated in the diagram.
4. *Please note if your screen has wheels go to page 18 for a detailed assembly guide for our wheel kit.*
5. Now that the frame is complete it is time to add the netting. The net is double layered with only one opening. Open the netting completely and lay it flat on the ground to find the opening. Laying the net flat will also ensure you are mirroring the shape of the frame during installation. Please note, the net is designed to be tight as it will loosen very quickly with usage.
6. Once you have the net pulled all the way to the bottom of the frame you can use the bungees to close the net around the bottom cross bar.
7. If you ordered a screen with padding and vinyl, please go to the last page for detailed instructions. Please note that the foam and vinyl will be in a second smaller box.

PRO TIP: Insert top bolts after netting installation for easier application